


BELTED LANE INSTALLATION

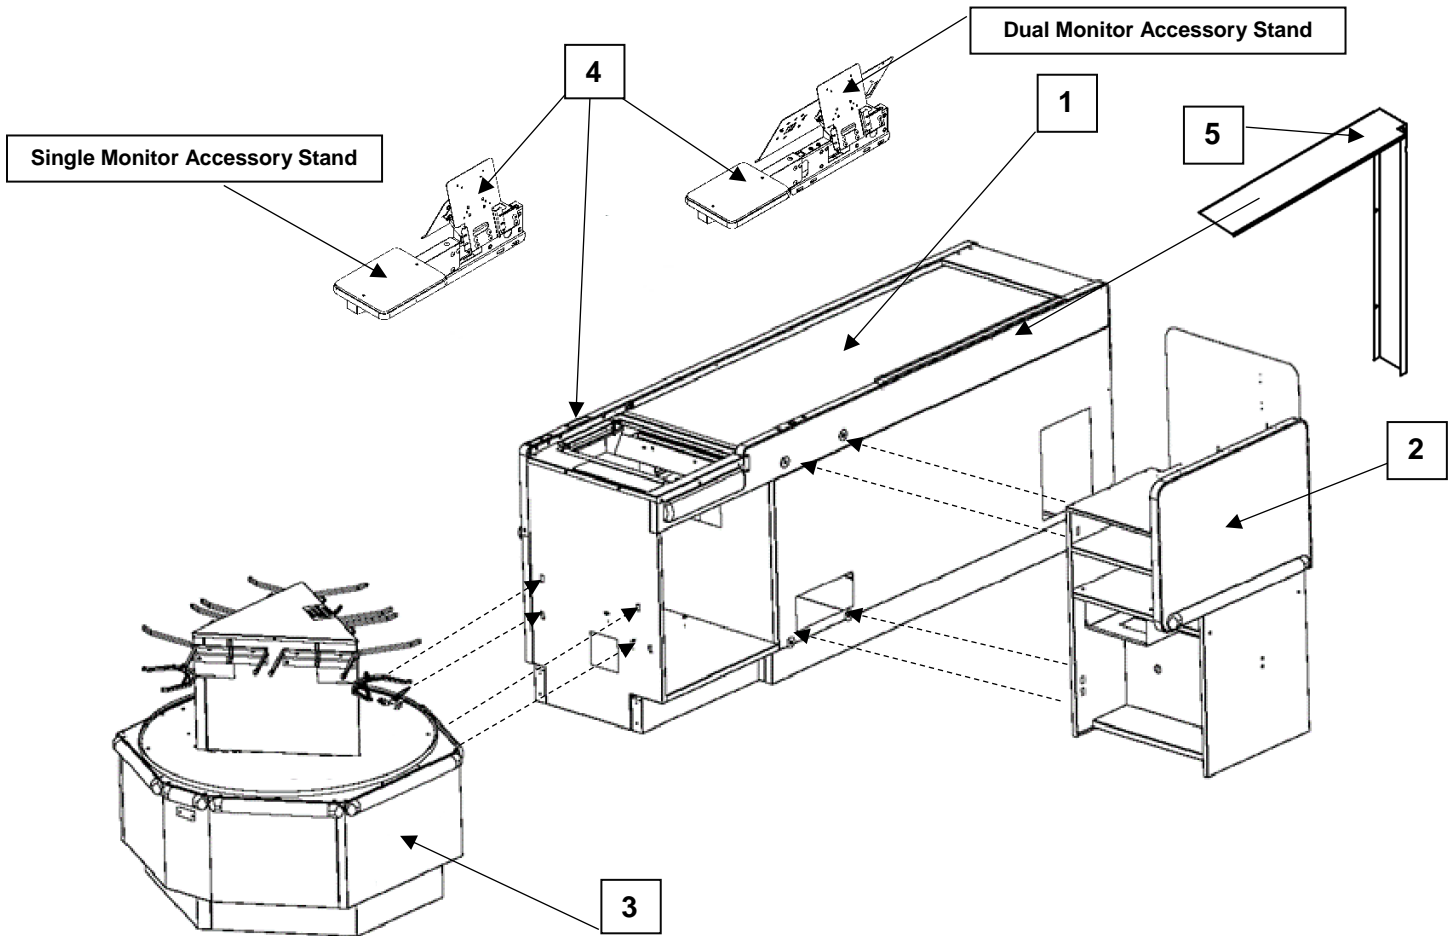

STEP 1: From the floor plan set the **Conveyor (#1)** in place.

Do not fully tighten any attachment bolts until all cabinets have been properly positioned and leveled.

STEP 2: Attach **Cash Stand (#2)** to **Conveyor (#1)** using (4) ¼-20 bolts.

STEP 3: Attach **Carousel (#3)** to **Conveyor (#1)** using (4) ¼-20 bolts.

Do not move or lift the Carousel (#3) by the bag racks or wood top. This will cause damage to the cabinet that will not be covered under warranty.

STEP 4: Ensure all cabinets are level and tighten all attachment bolts.

STEP 5: Install either the **Single or Dual Accessory Stand (#4)** to the **Conveyor (#1)** using (8) ¼-20 bolts.

STEP 6: Attach the **Merchandise Filler Cover (#5)** to the **Conveyor (#1)** with the five screws provided.

STEP 7: Anchor all cabinets to the floor. This can be accomplished with either a ¼" bead of clear silicone or floor anchors dependent upon local building codes.



For assistance with this service please contact the
Pan-Oston Field Operations Department at 800-472-6678